

SFT25EA24

Operating Instructions

Caution : Do not keep the keys in the safe itself

Opening the Safe for the first time

To open the safe for the first time, remove the small plastic cover on the front panel, insert the key into the lock and turn it counterclockwise, at the same time, turn the knob clockwise and open the door.

Installing the Batteries

The safe requires 4x AA Batteries. Remove the battery cover (on the back of the safe door) and install the batteries into the compartment. Ensuring the batteries are fitted with the correct corresponding polarity.

Programming the code

- A. With the door of the safe open, press the red button (located on the inside of the door near the hinge) release it and you will hear two beeps. The yellow light will be on at the same time.
- B. Now press from 3 to 8 numbers that you wish to use as a new user code, and confirm by pressing the letter A or B within 15 seconds. The safe “bleeps” twice and the yellow light will go off. Your code is now set

Using your Safe

To open the safe enter your code followed by the letter A or B, you will hear a beep and the green light will be on, then turn the door knob in the clockwise direction to open the door within 5 seconds.

If you or an intruder uses the incorrect code the safe will not open. If the incorrect code is used 3 times consecutively, you must wait 20 seconds before reattempting. If again the incorrect code is used 3 times you must wait approximately 5 minutes before reattempting access.

Override Instructions to open the safe

For your convenience, we have engineered a manual override system for your safe. *If you forget or misplace your combination the safe can be opened by override key manually.

- A. To use the key, remove the small plastic cover on the front panel
- B. Turn the key anti-clockwise, then turn the knob clockwise, and open the door